



EGGO

operating instructions



SAFETY AND ENDANGERMENTS INDICATION:

- The construction of this product corresponds to protective category II. In order to maintain this state and to secure safety in use, the user must take note of the security instructions and warnings contained in the instructions for use.
- Always cut the product off from the electricity supply before cleaning.
- Do not make any changes to the electrical connection of the product. Should such changes be required, please consult an electrician
- If there are any doubts as to the safe usage of the product, the product must be immediately disconnected from the electricity supply and secured, so that it can not be switched on accidentally.
- Signs for questioning the safety of the product could be:
 - a) The connecting cables or the product itself are damaged
 - b) The product does not function
 - c) The product has been in contact with fluids or humidity
- Special care is required in the presence of children, particularly if they attempt to put objects into the body of the product via an opening. In this case the risk of electric shock is high. Electrical products powered from electricity supply do not belong in the hands of children. In the work place, the accident prevention procedures set out by the trade association for electrical systems and means of production, should be strictly obeyed.
- Overuse of the product should be avoided.
- Never pour fluids over the product for risk of fire or electric shock. Should such a case occur, remove the plug immediately and consult an electrician.

ALL REPAIRS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.



LIGHTBULB CHANGE:

- Always let bulbs cool down to avoid risk of burning.
- Bulbs should only be change when the product is disconnected from the electricity supply.
- Bulbs should not be damaged during the exchange. Also make sure that the bulb is secure in the fixture.

- Disconnect the illuminated stool from the mains.
- Rotate the lamp 180 degrees so that the metal inset in the lower flat part of the product is visible.
- On the metal plate displaying the type description there are two screws. These should be loosened using a suitable screwdriver.
- The light element can now be removed and the bulb can be exchanged.
- The product can be re-constructed for use (in the reverse order).
- **Attention !** The screws should be tightened securely in order to achieve a good pressure seal. The cable should be laid in the special groove intended for this purpose.

TECHNICAL INSTRUCTIONS AND DATA:

Voltage: 220 - 240 V / 50 Hz
Opening diameter for bulb: 55mm

Lightbulb recommendation:

EGGO S Ø 30cm General usage candle lamp bulb
max. wattage 25 W / E14

EGGO M Ø 55cm General usage candle lamp or drop shaped bulb
matt or Superlux Crypton Type **max. wattage 60 W / E14**

EGGO L Ø 78cm Halogen bulb / Halolux-Ceram + socket matt
max. wattage 150 W / E27

ATTENTION! Energy saving lamps are not dimmable!



Authenticics GmbH

Am Ölbach 28

33334 Gütersloh

Germany

Phone + 49 (0) 5241 9405 - 0

Fax + 49 (0) 5241 9405 - 555

info@authenticics.de

www.authenticics.de